

Installation Instructions




1. Position Freechimes in desired location, according to correct Key stage height, this may require 2 persons.

2. Mark hole locations for each of the brackets at correct spacing in desired location

3. Drill hole locations according to your chosen fixings (frame fixings, wall bolts or chemical anchors) depending of the structure of the wall.

4. Fix through Brackets to surface with suitable fixings (not supplied) in correct orientation and Key stage and attached notes with fixings provided.

5. Beaters can be fixed to Backboards or directly to wall depending on customers preference.

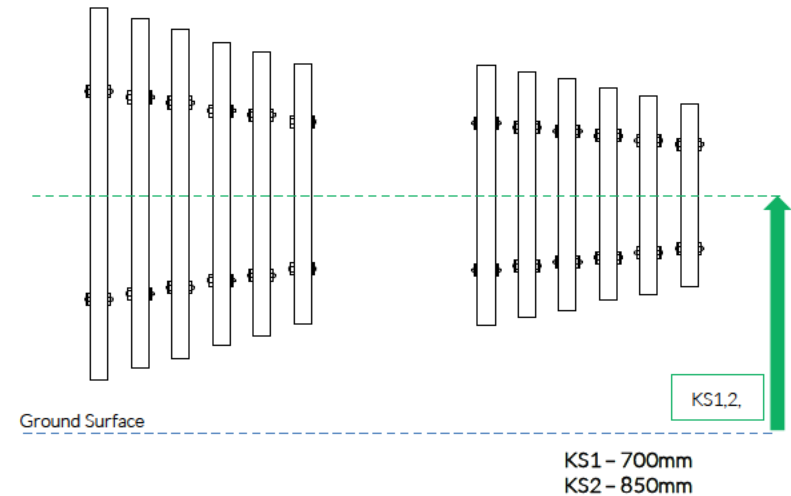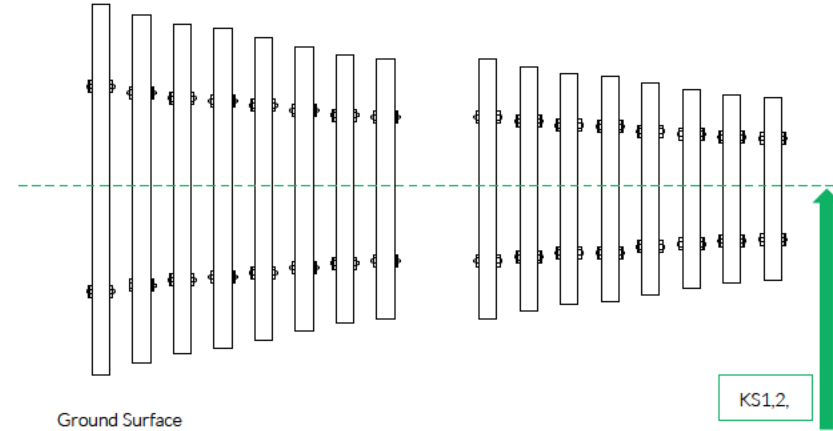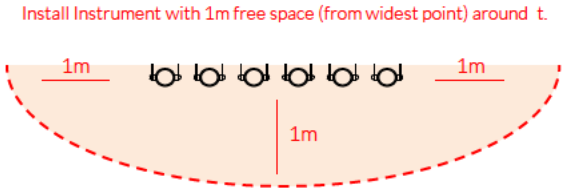

Wall Fixed Freechimes Notes Only Alto/ Soprano



Components:




Eye Straps X2



10x38mm Secure Screw X4

PLAN VIEW

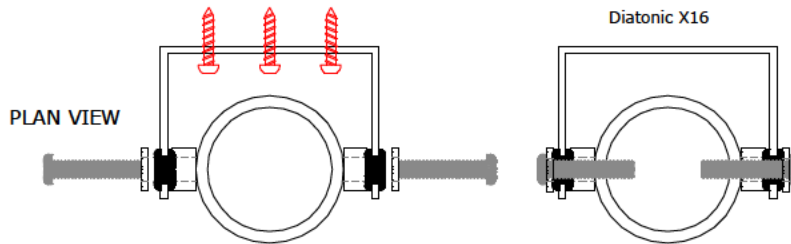

FREC Bracket
Pentatonic X12
Diatonic X16



M6 Form C Washer
Pentatonic X24
Diatonic X32



RUBBER WASHER
Pentatonic X24
Diatonic X32



RUBBER GROMMET
Pentatonic X24
Diatonic X32



M6x 30 PIN TORX
Pentatonic X24
Diaton c X32



Pair Small/Large Beaters X1

Wall fixings are not supplied, installer will select suitable method of fixing.

Spares available from percussionplay.com or from your local distributor

9-15 Kg