

# Installation Instructions





1. Position the 2 sections of the Freechimes Symphony in desired location, according to correct Key stage height, this may require 2 persons.

2. Mark hole locations (X10) using the pre drilled holes in the Black HDPE Backboards

3. Drill hole locations (X10) according to your chosen fixings (frame fixings, wall bolts or chemical anchors) depending of the structure of the wall.



4. Fix through Backboards (X10) with suitable fixings (not supplied) in correct orientation and Key stage

5. Beaters can be fixed to Backboards or directly to wall depending on customers preference. 1 Pair at each end and one in the centre.

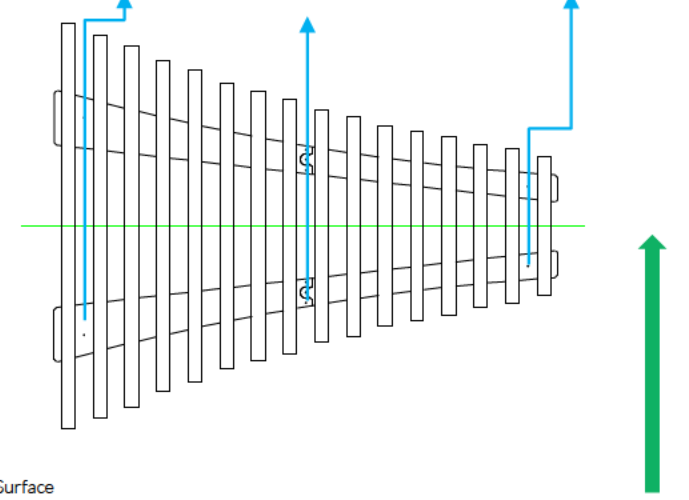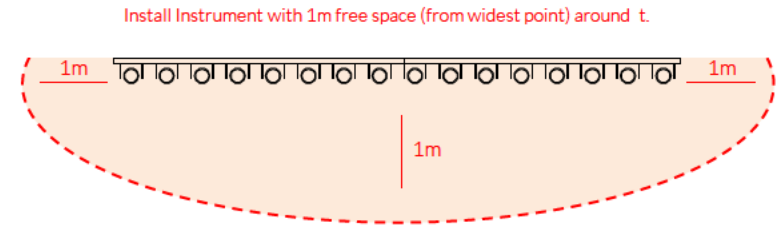

KS1,2

KS1 - 850mm  
KS2 - 1100mm

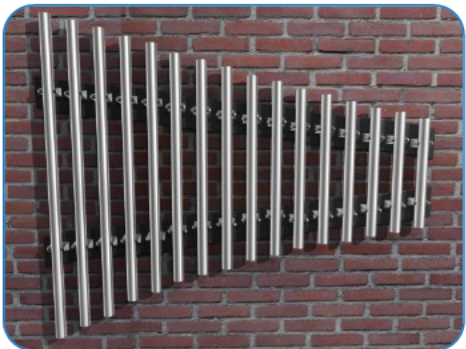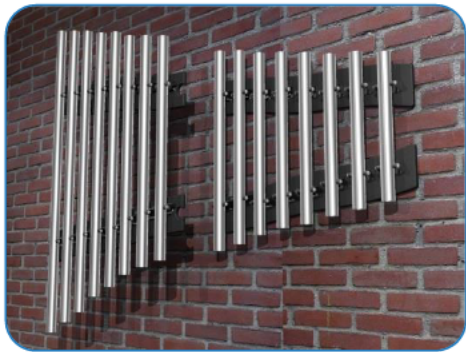

## Wall Fixed

Freechimes  
Pentatonic  
Symphony



## Components:



Eye Straps  
X3

 


Pin Torx 25  
Driver Bit X1



10x38mm  
Secure Screw  
X6

Metric Conversion:  
850mm/ 33"  
1m/ 39"  
1100mm/ 43"



Pair Small  
Beaters X1

Pair Large Red  
Beaters X2

Wall fixings are not supplied, installer will select suitable method of fixing.

Wall Fixings/  
Anchors not supplied

Spares available form  
[percussionplay.com](http://percussionplay.com) or from your  
local distributor

48 Kg