

# Installation Instructions




1. Position Freechimes in desired location, according to correct Key stage height, this may require 2 persons.

2. Mark hole locations for each of the brackets at correct spacing in desired location

3. Drill hole locations according to your chosen fixings (frame fixings, wall bolts or chemical anchors) depending of the structure of the wall.

4. Fix through Brackets to surface with suitable fixings (not supplied) in correct orientation and Key stage and attached notes with fixings provided.

5. Beaters can be fixed to Backboards or directly to wall depending on customers preference.

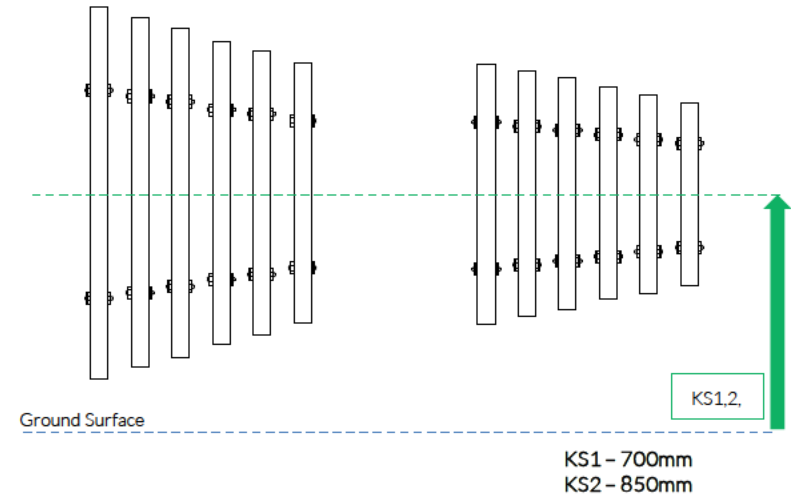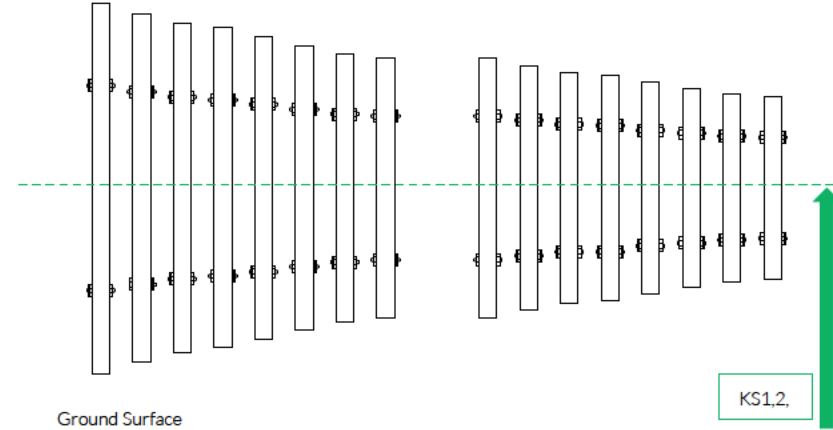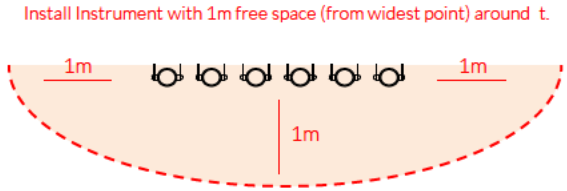

## Wall Fixed Freechimes Notes Only Alto/ Soprano



### Components:




Eye Straps X2



10x38mm Secure Screw X4

PLAN VIEW

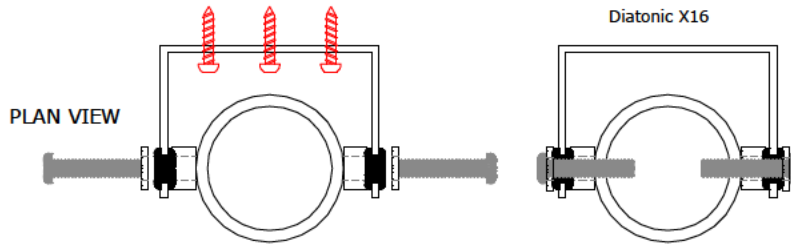

FREC Bracket  
Pentatonic X12  
Diatonic X16



M6 Form C Washer  
Pentatonic X24  
Diatonic X32



RUBBER WASHER  
Pentatonic X24  
Diatonic X32



RUBBER GROMMET  
Pentatonic X24  
Diatonic X32



M6x 30 PIN TORX  
Pentatonic X24  
Diaton c X32



Pair Small/Large Beaters X1

Wall fixings are not supplied, installer will select suitable method of fixing.

Spares available form [percussionplay.com](http://percussionplay.com) or from your local distributor

9-15 Kg