

Wall Fixed

Sonora HD Page 1 of 2



Components:



x4 10x38mm Secure Screw


Thread Lock Solution Required (Not Supplied)



Assembly Guide PPSWAV


1. Mark hole positions on wall, then drill to manufacturers specified diameter and depth of M8 rawl bolt (See Wall Fix installation sheet) 2. Once holes are drilled insert M8 rawl bolts into holes and set in place to secure tightly.


3. Attach instrument to rawl bolts or other suitable wall anchors (not supplied) making sure they are tight to the wall.



4. Once all mounts are fixed in place attach the beaters at each end of the instrument on directly to the wall.

Install Instrument with 1m free space (from widest point) around it.

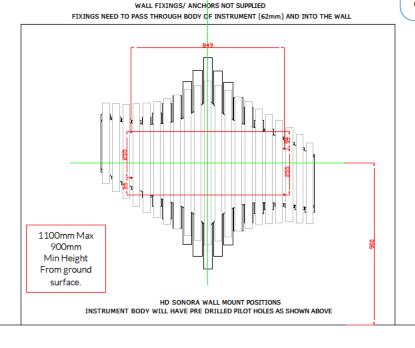

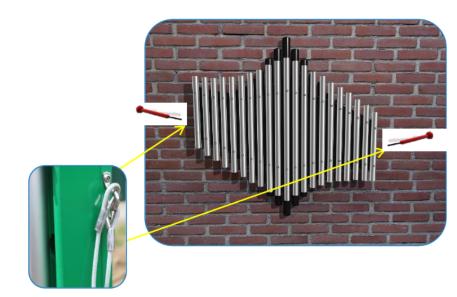



Wall fixings are not supplied, installer will select suitable method of fixing. Suggested Fixing M8 Rawl Bolt





Wall Fixed

Sonora HD Page 2 of 2



Components:




Saddle Straps




Thread Lock Solution Required (Not Supplied)



Assembly Guide PPSWAV





WALL FIXINGS/ ANCHORS NOT SUPPLIED FIXINGS NEED TO PASS THROUGH BODY OF INSTRUMENT (62mm) AND INTO THE WALL

